

Efficient Glasswashing DO's & DON'Ts

DO



STEP 1 PRE-WASH

- Empty the glass of beer, liquor, other substances or foreign objects eg Straws

DO



STEP 2 LOADING

- Ensure you have the correct baskets for the glasses you are washing.
- Ensure baskets are filled to capacity for best results.

DO



STEP 3 MACHINE PREPARATION & OPERATION

- Before a washing session, ensure the interior of the machine is thoroughly clean.
- Wash jets must be clean and clear. Clean every 7 days.
- Filters are clean and clear. Wash daily.
- Ensure chemical containers are sufficiently full for anticipated washing session.
- Only commence washing once wash and rinse water have reached operational temperature.
- If water softener is fitted, regularly regenerate with salt.
- Always allow the machine to complete its wash program.

DO



STEP 4 SHUT DOWN & MAINTENANCE

- Drain and rinse out machine after every washing session, removing debris like lemons and cocktail sticks.
- Clean filters.
- Allow cleaned glasses to air dry after removing from machine.
- Leave the door slightly open to allow the machine to air-dry.

DONT



DONT

- Never use washing up liquid to pre-wash items or in the machine itself.
- Never fill the basket on the door of the machine.
- Never interrupt the wash program.
- Never forcibly increase rack throughput.
- Never overload baskets. Use the machine until it is up to operational temperature.
- Add any detergent or other product not recommended for the machine.

Efficient Dishwashing

DO's & DON'Ts

DO



STEP 1 PRE-WASH

- Remove all solid material by pre-scrapping –EgFood scraps, cocktail sticks.
- Ensure that containers for speciality drinks or food containing cream etc are pre-rinsed prior to machine washing.

DO



STEP 2 LOADING

- Ensure you have the correct baskets for the items you are washing.
- Ensure baskets are filled to capacity and that plates are racked correctly.


DO



STEP 3 MACHINE PREPARATION & OPERATION

- Before a washing session, ensure the interior of the machine is thoroughly clean.
- Wash jets must be clean and clear. Clean every 7 days.
- Filters are clean and clear. Wash daily.
- Ensure chemical containers are sufficiently full for anticipated washing session.
- Only commence washing once wash and rinse water have reached operational temperature.
- If water softener is fitted, regularly regenerate with salt.
- Regularly change wash tank water.
- Always allow the machine to complete its wash program.

DO

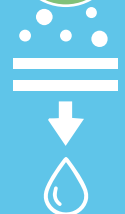

STEP 4 SHUT DOWN & MAINTENANCE

- Drain and rinse out machine after every washing session.
- Clean filters
- Allow cleaned crockery to air dry after removing from machine.
- Leave the door/hood slightly open to allow the machine to air-dry.

DONT



DONT

- Never interrupt the wash program.
- Never forcibly increase rack throughput.
- Never overload baskets.
- Use the machine until it is up to operational temperature.
- Add any detergent or other product not recommended for the machine.